

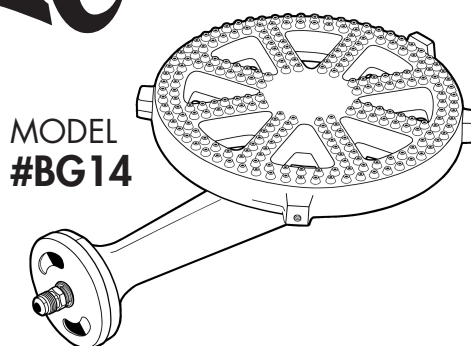


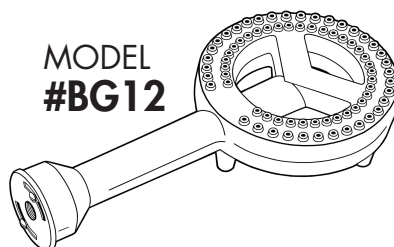

**READ MANUAL
BEFORE USE**

BAYOU CLASSIC®

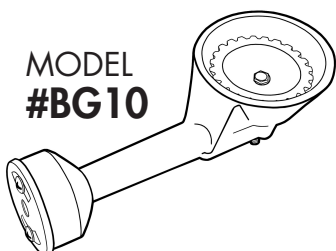

CAST IRON BURNER OWNER'S MANUAL


**SAFETY ALERTS, OPERATING INSTRUCTIONS
GENERAL MAINTENANCE & STORAGE**

This manual is for Barbour International "Bayou Classic" products only. If you are using another manufacturer's product, refer to the manual supplied with that product.

This Instruction Manual contains important information necessary for the proper and safe use of this burner. You must carefully read and follow all warnings and instructions in this manual before using this burner.

KEEP THIS MANUAL FOR FUTURE REFERENCE

! DANGER !

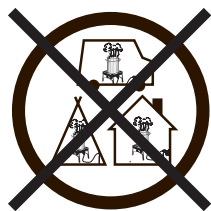

CARBON MONOXIDE HAZARD

Outdoor gas appliances can produce carbon monoxide which has no odor. Using outdoor gas appliances in an enclosed space can kill you.

Never use outdoor gas appliance in an enclosed space such as a camper, tent, boat, car or home.

NOT FOR COMMERCIAL USE

For Questions and Information call us at: **1-800-864-6194** • Monday - Friday 7:30am - 4:30pm CST
Barbour International, Inc. • 101 Cypress Way • Brandon, MS 39042 • **www.thebayou.com**

CALIFORNIA PROP 65 WARNING: for California residents

- Combustion by-products from the use of this product contain chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.
- This product contains a chemical(s) known to the State of California to cause cancer, birth defects or other reproductive harm.

Safety Precautions & Warnings

Outdoor gas appliances do not have automatic thermostat controls so must be attended and monitored at all times during use.



WARNING



FIRE HAZARD




**READ MANUAL
BEFORE USE**




**NEVER LEAVE
UNATTENDED**




**OUTDOOR USE
ONLY**

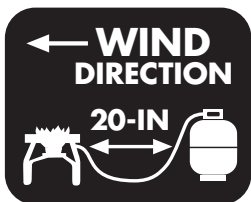

**INSURE PROPER
POSITIONING**

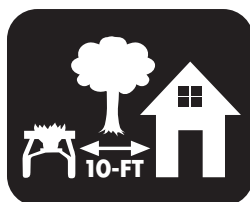

**KEEP AWAY FROM
FLAMMABLE
OBJECTS**

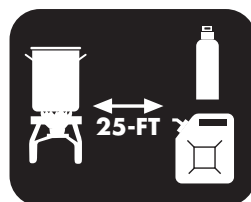

**KEEP FLAMMABLE
MATERIALS AWAY**



**NEVER USE UNDER
FLAMMABLE
OVERHANG**




**NEVER USE ON
FLAMMABLE
SURFACES**




**KEEP CHILDREN
AND PETS AWAY
FROM COOKER**



**NEVER LEAN
OVER BURNER**

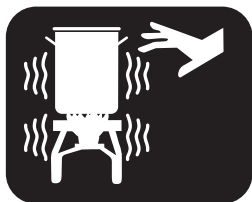

**HOT DURING AND
AFTER USE!**

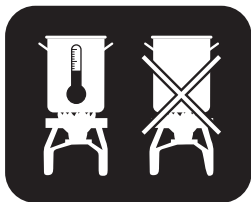

**USE THERMOMETER
WHEN FRYING**




**NO LID ON POT
WHEN FRYING**



**TRIP HAZARD
WATCH YOUR STEP**



NO BARE FEET

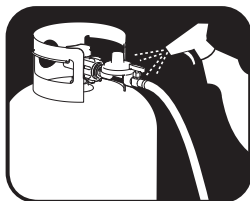

**ALWAYS PERFORM
GAS LEAK TEST**




**KEEP FIRE
EXTINGUISHER
NEARBY**

Failure to follow these instructions could result in fire or explosion which could cause property damage, personal injury or death!

Remember: Think Safety and Use Common Sense!

⚠ WARNING 🔥

1. **DO NOT USE THIS CAST IRON BURNER ON GAS GRILLS!**
2. Carefully follow assembly instructions, cooker positioning, gas leak testing, lighting and operating instructions that accompany your gas cooker.
3. LP (propane) gas is colorless, tasteless, heavier than air, and is both flammable and explosive. Combustion of propane consumes oxygen and produces carbon monoxide (a poisonous gas). Therefore, never operate an outdoor cooker inside a building or confined area where ventilation may be restricted. Make sure the LP Cylinder and the appliance is placed in an open area. Do not obstruct the flow of combustion and ventilation air.
4. In sunlight or other bright light, the flame may be almost invisible. After installation and checking for gas leaks, use extreme caution keeping hands, hair and clothing away from the cooker. Never put face or hands over burner while lighting.
5. This burner is for attended **OUTDOOR COOKING** use only. Do **NOT** use in a building, garage or any other enclosed area. Do **NOT** use on wooden decks, under roof overhangs, on porches, carports or at garage door openings. This burner is **NOT** intended to be installed in or on recreational vehicles and/or boats.
6. Do **NOT** locate a gas appliance under **ANY** overhead construction. Keep a minimum clearance of 10-ft from the sides, front and back of the appliance to **ANY** construction. Keep 25-ft away from any combustible material such as wood, household chemicals, paint, gasoline and other flammable vapors and liquids.

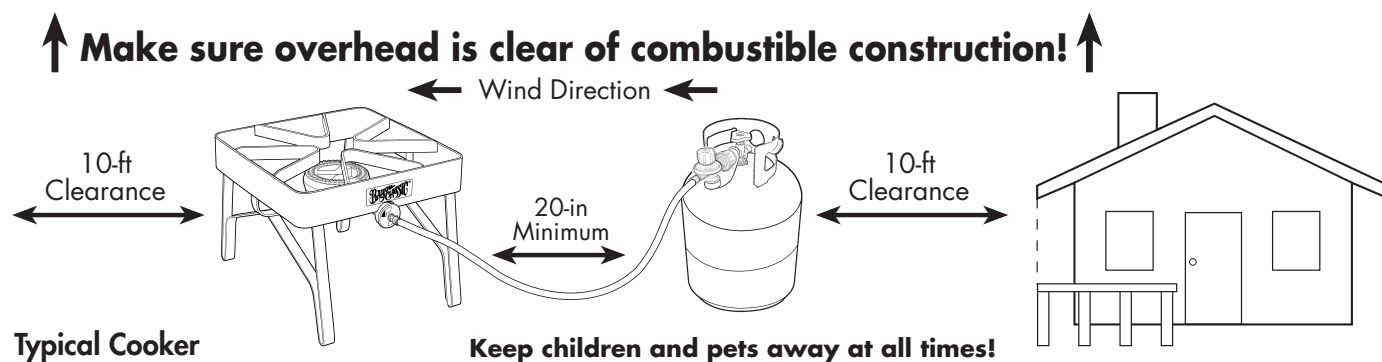

7. Outdoor gas cooker appliances do not have thermostat controls and must be attended and monitored at all times during use.
8. **This part is not intended for and should NEVER be used as a heater or used indoors.**
9. Use Bayou Classic appliances only in accordance with state and local ordinances and codes. In the absence of local codes, installation must conform with the National Fuel Gas Code, ANSI Z223.1/NFPA 54, Storage and Handling of Liquefied Petroleum Gases, ANSI/NFPA 58 or CSA B149.1, Natural Gas and Propane Installation Code; or CSA B149.2 Natural Gas and Propane Installation Code.
10. Bayou Classic® appliances, replacement parts, and accessories are not intended for use in a Commercial Setting.

Failure to comply with these warnings and instructions can result in property damage, personal injury and death.

GENERAL MAINTENANCE & STORAGE

1. Store cooker in a dry place. Do not store outside exposed to weather. Storage of a gas cooker appliance indoors is permissible only if the LP cylinder is disconnected. If storing cooker indoors, detach and leave LP cylinder outdoors. LP cylinders must be stored outdoors out of the reach of children and must **NOT** be stored in a building, garage or any other enclosed area.
2. Spiders and small insects have been known to spin webs inside the burner tube. Obstructions in the burner tube interfere with the flow and mixture of air and gas through the burner. A clogged burner tube may result in a back-flash fire toward the LPG hose and beneath the cooker appliance. If burnertube becomes clogged and air flow restricted, remove the burner from the frame and clean the burnertube with a stiff, bent wire. Inspect and clean inside the top burner ports as well.
3. For long term storage, cover the cast iron burner and regulator hose assembly in a plastic bag.
4. Turn air control shutter to closed position after each use to reduce chance of insect intrusion.
5. Do not tamper with or attempt repairs on the burner, frame, valves or LP cylinder. Allow only qualified LP gas dealers to make repairs. For replacement parts contact **www.thebayou.com**.

5. Do not tamper with or attempt repairs on the burner, frame, valves or LP cylinder. Allow only qualified LP gas dealers to make repairs. For replacement parts contact www.thebayou.com.
6. **Always close LP cylinder valve and regulator control knob after use.** Always use and store LP cylinder in an upright position. Never store or transport LP cylinders in occupied enclosures.
7. Check and tighten any loose hardware before each use.
8. Inspect entire appliance including regulator hose and burner assembly before each use. Replace any damaged or worn parts.

ATTENTION: Propane Tanks, and outdoor gas appliances, come equipped with a safety device that restricts the flow of gas should the hose be cut or severed. While the safety device protects the operator, it can sometimes impair lighting the cooker. **To reduce trouble lighting the cooker, always turn Regulator Control Knob/Valve to OFF position after every use!**

TROUBLE SHOOTING GUIDE

SYMPTOM	CAUSE	POSSIBLE SOLUTION
Burner lights but the flame remains very small	Rapid gas flow from propane tank activates EXCESS FLOW safety device because Regulator Control Knob is not in OFF position	Repeat cooker lighting instructions and be certain to S-L-O-W-L-Y open cylinder valve one full turn, then S-L-O-W-L-Y open regulator control knob to light burner. It may be necessary to disconnect, then reconnect the regulator to the cylinder in order to reset the gas flow system. After doing this, make certain regulator control valve is turned to OFF position.
Burner will not light	Blockage in burner from spider webs, insects, dirt doobers and debris	Disconnect hose from burner. Clean and check burner for spiders, insect nests and debris
Burner will not light and burner tube is clean	Too much air and not enough gas	Turn air shutter to almost closed position, then re-light the burner
	Not enough gas flow from propane tank	Open propane tank valve all the way
	Low gas level in propane tank, or tank is empty	Check gas level in propane tank, re-fill or exchange tank
Yellow, sooty, irregular flame	Air shutter not adjusted correctly causing too much gas in mixture	Adjust air shutter on the burner until flame is blue
	Blockage in burner	Clean and check burner for spiders, insect nests and debris
Hissing or gurgling sounds coming through regulator hose assembly from tank to burner  WARNING Do not use the appliance if gas leaks cannot be stopped.	Water in burner	Check burner for moisture, make sure burner is dry
	Damaged hose	Perform soapy water test to check for cracks in hose.
	Gas leak	Perform soapy water test to check all connections
Flame has gone out	Low gas level in propane tank, or tank is empty	Check gas level in propane tank
	Too much wind	Check wind direction and set cooker away from windy areas
	Blockage in burner	Clean and check burner for spiders, insect nests and debris
	Water in burner	Check burner for moisture, make sure burner is dry

NOTE: Replacement Parts can be purchased at www.thebayou.com or call 800-864-6194, M - F, 7:30 - 4:30

BCA000068-000