


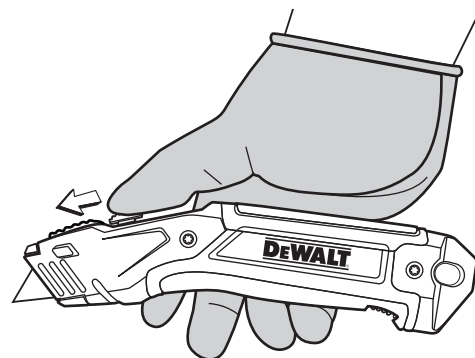

BLADE CHANGE INSTRUCTIONS

1



EXTEND SLIDER FORWARD



2


PRESS AND HOLD BLADE CHANGE BUTTON, REMOVE BLADE

**TO INSERT NEW BLADE, PRESS AND HOLD
BLADE CHANGE BUTTON AND INSERT BLADE**

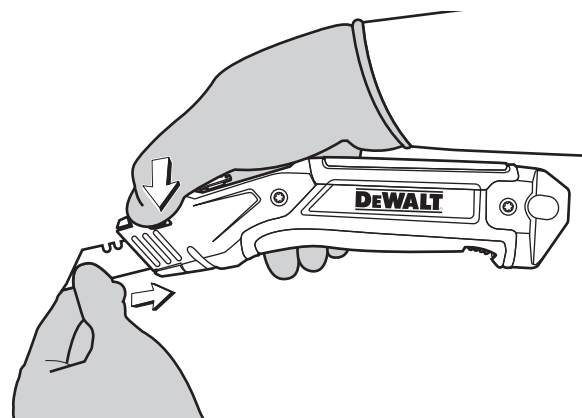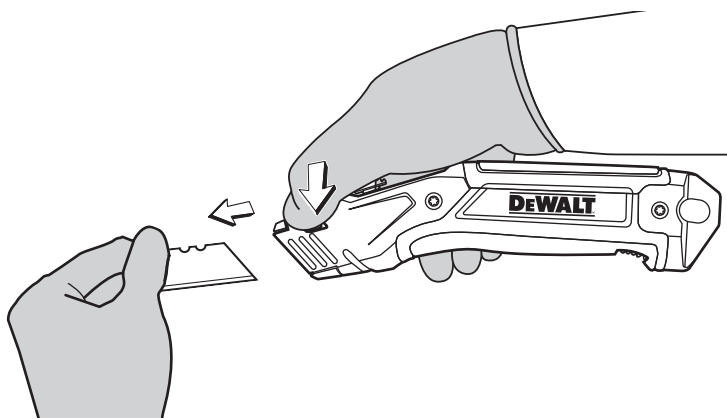

3

RETRACT THE SLIDER TO CLOSE

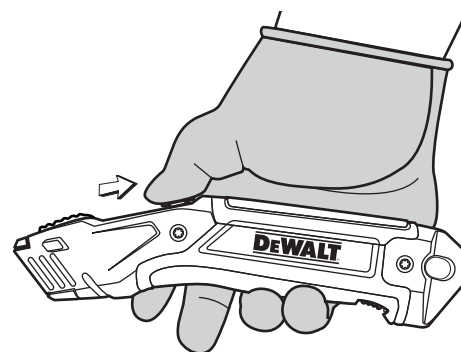



WARNING / ADVERTENCIA / AVERTISSEMENT


WEAR SAFETY GOGGLES. BLADES ARE EXTREMELY SHARP. HANDLE WITH CARE. WEAR CUT RESISTANT GLOVES TO PROTECT HANDS. DO NOT BEND BLADES. BLADES MAY BREAK IF BENT AND MAY RESULT IN BODILY INJURY. CLOSE OR COVER BLADE WHEN NOT IN USE.

**DWHT10046
RETRACTABLE
UTILITY KNIFE**

BLADE STORAGE INSTRUCTIONS


1

PUSH TAB UPWARD TO RELEASE STORAGE DOOR

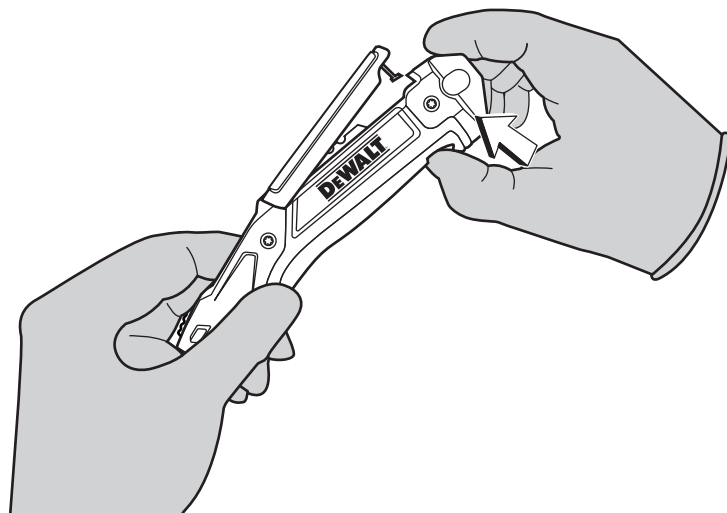

2

STORAGE SPACE CAN STORE UP TO 5 BLADES

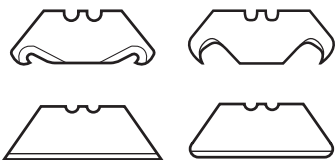

Accepts most utility blades

