

24099-6-24 – LA-280+KNF-6-24 Operating instructions & Precautions 08152201

Operation Flashlight: To cycle through the brightness modes, repeatedly press the power button. To focus the beam, hold the body of the light and twist the head to the desired degree of focus.

Operation Folding Knife: Hold the body of the knife firmly and pull the blade all the way open until it locks into place. To close the blade, push the locking spring upward to unlock the blade and fold it all the way in. **Caution: Be sure fingers are not in the path of the blade when closing the knife.**

Battery Replacement: To replace batteries in light, unscrew the cap at the bottom of the flashlight. Remove old batteries and insert 2 new AA alkaline batteries, positive end first. Screw the cap back on tightly.

Caution: Replace all batteries at the same time. Do not install batteries backwards, charge or put in fire. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc.) batteries. This may cause batteries to leak or explode. Old or discharged batteries must be recycled or disposed of properly, according to local regulations.

WARNING!

To prevent serious injury, including temporary or permanent loss of sight do not stare into the light, shine light into eyes or focus the beam using an additional lens. Keep away from infants and toddlers as this product contains small parts.

Cut Hazard! Improper use, chiseling, ice picking, prying, applying force onto back of blade or contact may result in injury. Always keep blade away from fingers and body. Do not use if damaged or blade is loose or apply force onto back of blade. Handle with care. If not in use, store in a safe place. Keep out of reach of children.

This product is not a toy! Use this light and folding knife only as it is intended. Inspect before every use. Do not use if parts are damaged, loose or missing.

SAVE THESE SAFETY PRECAUTIONS.