


EASY STEPS FOR INSTALLING WIRE ROPE CLAMPS

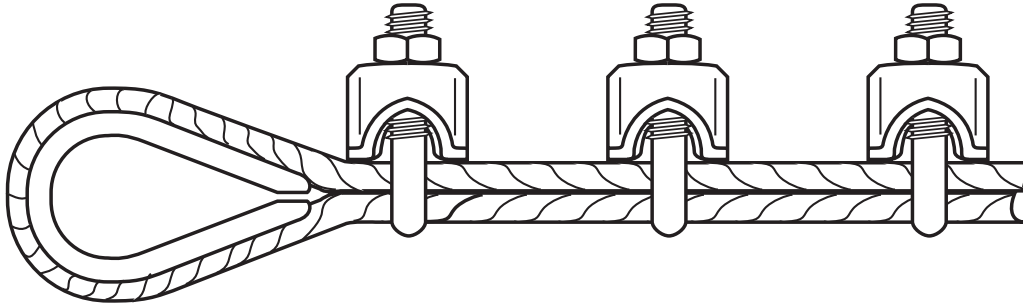

1. Place the clamps on the rope so that the saddle engages the long end of the rope and the U-Bolt grips the short end.
2. Locate the first clip so the saddle is close to, but not pressing on the thimble.
3. Space additional clamps six rope diameters apart and tighten nuts evenly. Retighten as needed after each use.
4. When using plastic covered rope, remove the plastic where clamps are applied and use clamps the size of bare rope.

| DIAMETER ROPE (Inches) | Recommended No. of Clamps for Each Connection | WRENCH SIZE |
|------------------------|---|-------------|
| 1/16" | 2 | 9/32" [7mm] |
| 1/8" | 3 | 5/16" |
| 3/16" | 3 | 7/16" |
| 1/4" | 3 | 1/2" |
| 5/16" | 3 | 1/2" |
| 3/8" | 3 | 9/16" |
| 1/2" | 4 | 11/16" |
| 5/8" | 4 | 3/4" |
| 3/4" | 5 | 7/8" |
| 1" | 5 | 15/16" |

For a safe connection, be sure to use the right number of clamps and always follow rope manufacturers specifications

| | | | | | |
|----------|--------------------|-----------------------------|-------------------|--------------------------|-------|
| Revision | 1 | Family No. | 3230, 4230 | SKU | ----- |
| Date | August 2013 | ©2013 Spectrum Brands, Inc. | | Wire Cable Clamps | |
| | | Description | | | |